


3D Shutter Glasses Instructions

Model X

Overview

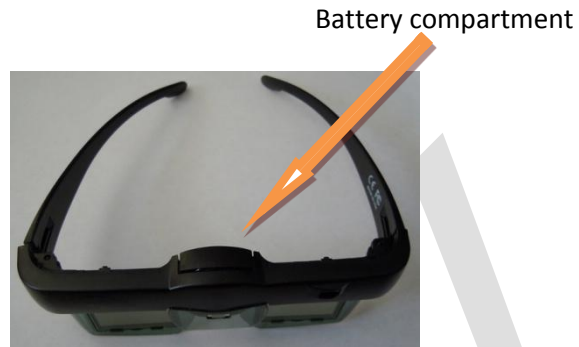

Turning on and off

Model X glasses will turn on automatically by opening the temples and turn off automatically when not used. You may need to gently twist or jiggle the temples to activate when first used or to remove and reinsert the batteries to make good contact.

The battery level and changing batteries

The battery level can be measured with a voltmeter and each CR 2032 battery should be 3V. Extra



Open the cover



Remove the old battery and put 2 new ones



Close the cover

batteries are included.

Nosepads/Temple pads

Pads that may be used on the nosepiece or on the temples are included. If needed you may add one or more pairs for comfort. You may obtain them at any drugstore.

Troubleshooting and FAQs

- I don't see any 3D effect.
Be sure the programming you are watching is 3D. If the programming is 3D, you should see a double image without the glasses.
Make sure you are using glasses in emitter's working range(ca. 3Mx3M).
Check the battery voltage and replace it if necessary.
Emitter's LED light must be **green continuous** mode--other colors are for other type glasses.
- My screen flickers.
There may be some flicker when watching a 3D program on an older tube type CRT TV at 50Hz for PAL and 60Hz for NTSC. To minimize flicker, turn down the lights in the room and lower TV brightness. The darker the room, the less flicker you will notice.
- The 3D images do not look correct.
You may need to reverse the right/left polarity of the images by pressing the button on the emitter.

PLEASE READ THE LATEST VERSION OF THE FAQ ON OUR PAGE www.3dtv.jp

If your glasses do not activate make sure the glasses are on (temples bent all the way out and jiggle them a bit). We check all glasses but the battery contacts may not be perfect so you may remove and reinsert them if needed. Unplug the Emitter while the 3D program is running and replug. The Green LED should light if you have the software running and your PC or TV hardware/software is in 3D Mode. If this does not work it is likely your problem is with your system setup so please read our faq at www.3dtv.jp carefully.

WARNING: Under normal operating conditions, the 3D shutter glasses systems are perfectly safe to use for any duration you would normally view 3D images on your screen. However, some people may experience discomfort that could signal problems with the hardware, software and /or physical problem with your visual system. Discontinue use of the 3D glasses and consult a physician if you experience any of the following: headache, eyestrain, blurry vision, double vision, involuntary movements, eye or muscle twitching, confusion, loss of awareness of your surroundings, dizziness or disorientation. To minimize the potential for any of the above symptoms to arise, adjust the ambient lights darker. If you are using a computer system, set the monitor refresh rate to the highest possible setting.

EPILEPSY WARNING: IF YOU OR ANY MEMBER OF YOUR FAMILY HAS A HISTORY OF EPILEPSY, CONSULT A PHYSICIAN BEFORE USING THIS OR ANY OTHER 3D PRODUCTS.